



**E301FAR**

# **10A 2 Pin Rubber In-line Connector**

## **Product Manual**

**IMPORTANT**

Installer and Users please note: These instructions should be read carefully before use and this document constitutes part of the product which should be kept safely by the user alongside the product.

**BEFORE USE**

You must inspect the item for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

## **PRODUCT SAFETY**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the device.
- Cleaning and user maintenance shall not be made by children without supervision.
- For indoor use only.
- Maximum load 10A.
- Do not use the item for other than its intended use.
- Check the product before use for damage. If any damage is detected stop using it immediately and consult your supplier.

## **GENERAL SAFETY REQUIREMENTS**

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy. For office and retail premises (and buildings such as village halls) the wiring must be inspected at least once every 5 years. It is recommended that all buildings be fitted with smoke alarms (it is mandatory for new buildings).

## **HOW TO USE**

1. Only suitable for items of 10A or less that do not require an earth connection.
2. Open the plugs by removing the screw(s)
3. Loosen the cable grips at both Ends
- 3-4. Connect Live & Neutral cables to the respective terminals on each side of the connector remembering that the appliance/item to be powered is on the plug side and the power in is on the socket side. If the item to be powered has an earth wire then this connector cannot be used and a 3 pin connector must be used (E301FB).



### 4.5. Tighten and check the connections

6. Secure the cable grips at both ends taking care that the grip is across the outer insulation and not the basic cable insulation.
7. Reassemble the cases and secure using the screw(s)
8. Ensure the connectors are fully and firmly assembled before use

## **SERVICE WARRANTY**

- Eagle guarantees the product free from defects in materials and workmanship for a period of twelve months.
- Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.
- The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.
- Our guarantee is administered by our retailers.
- If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Eagle, only your retailer can arrange a replacement.
- If the product needs to be repaired or replaced, you must contact the retailer from whom you bought it.
- If you have just received your product and require technical help using it, please call our Help Desk on (0845) 459 4816
- If you have any other technical queries about the product, please call our Help Desk on (0845) 459 4816

Electrovision Ltd.  
Lancots Lane, Sutton  
St. Helens, Merseyside  
WA9 3EX  
[www.Electrovision.co.uk](http://www.Electrovision.co.uk)